


If the machine does not work, even when the power switch is turned on, the house fuse or machine fuse may be blown out. You can easily test the house fuse by plugging a small appliance such as a radio or table lamp into the same power receptacle as the edger. If the house fuse is OK then you will need to replace the fuse.

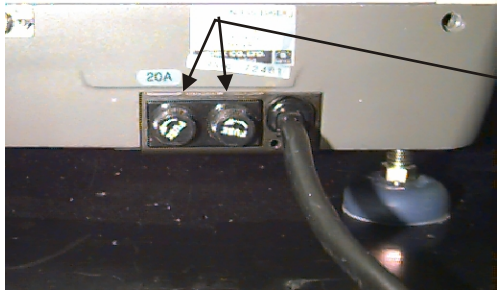

Rear View of Edger

- 1- Turn the power switch OFF (0) and disconnect the power supply cord from the outlet.
- 2- Remove the fuse holder on the rear side of the machine by turning it counterclockwise.
- 3- Remove the old fuse and put a new one of the same specification, in the fuse holder.
- 4- Push the holder into the machine by turning it clockwise.