




- 1- Load a shape on the display screen.
- 2- Touch the **Hole** tab.

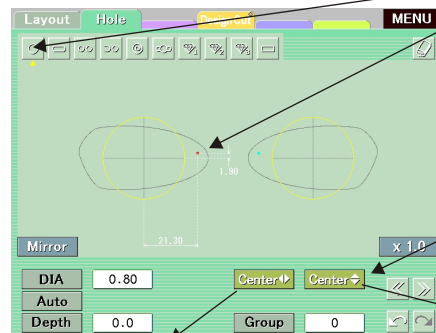

- 3- Drag and drop a hole from the hole type tabs to the approximate location for each hole.
- 4- Repeat step 3 for each hole.
- 5- Determine the correct layout method based on the coordinates provided by the frame manufacturer.
- 6- Touch the horizontal (X) and vertical (Y) buttons and select the appropriate layout.



X
Center

Y
Center

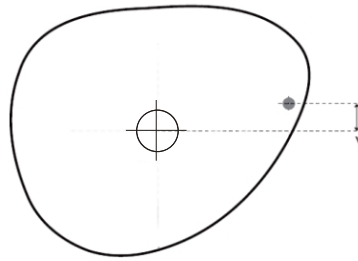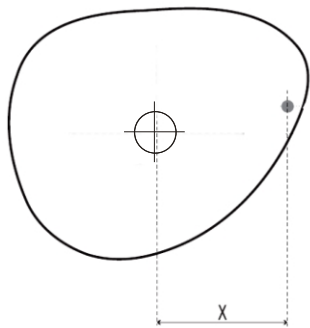



B-Edge

B-Edge

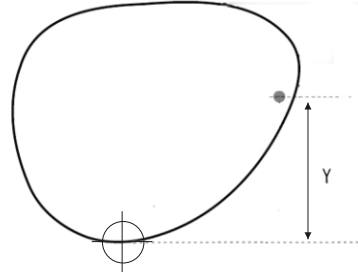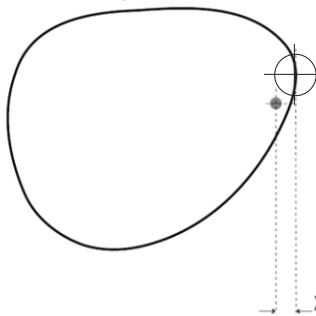


H-Edge

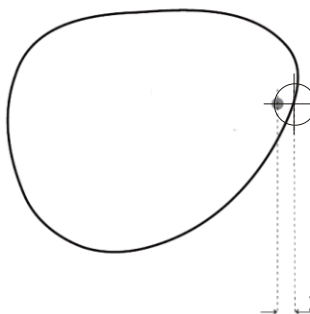

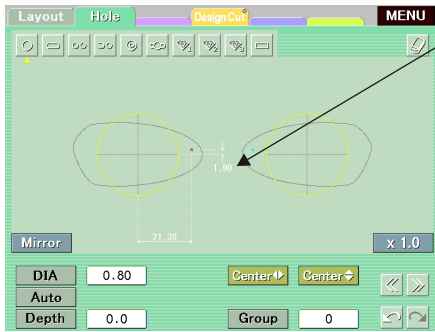

7- Touch a hole's X coordinate value.

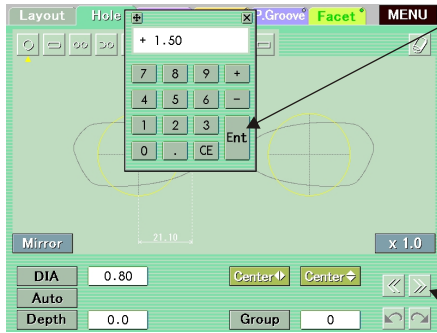

8- Enter the value for the X coordinate.

9- Repeat these last two steps for the Y coordinate.

10- Touch value field to the right of **DIA**.

11- Enter the diameter of the hole.


12- Touch either back or forward buttons to select another hole.

13- Repeat steps 7-9 for all additional holes.

14- When you are finished, press the **Layout** tab to edge and drill the lens.

Slots

For slots, follow the same procedure except, drag a slot instead of a hole. The slot differs from a hole as it provides you with two values for each slot.

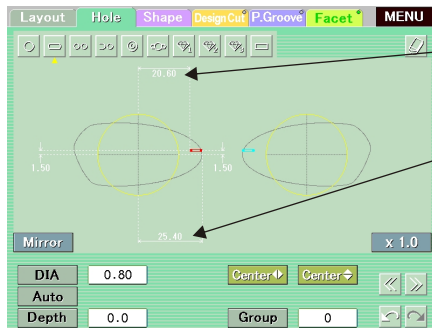

One value indicates the beginning point where the drill starts the slot.

The value other indicates the ending point.