

Tools required for this procedure:

1) Metric allen wrenches from 1.5mm to 6mm

Parts that will be installed in this procedure:

1) LE-7070 or LE-8080 edger

LE-7070/8080 Unpacking Instructions:

The following instructions are given with the assumption that the installer is standing in front of the edging unit. Due to the varying options available for this edger, some items may not apply:

- 1) Unpack the edger from the packing carton and place it on the bench.
- 2) Remove the packing screw (3mm) from the left side of the edger. (See Fig. 1)
- 3) Remove the masking tape from the grinding chamber and tracer doors. (See Fig. 2)
- 4) Remove the foam from the tracer, and all masking tape inside the tracer. (See Fig. 3 and 4)
- 5) Connect the grey drain hose to the bottom of the edger by rotating it clockwise. (The thumb of your right hand turns to left)
- 6) Connect the water line to the bottom of the edger. There is a brass nozzle that the hose will fit around.
- 7) Plug the pump into to the edger using the cord dangling from the bottom of the edger. In some cases, the cord may not be there. If this is the case, the receptacle is located on the back of the edger.
- 8) If this edger has the optional Vacuum unit, plug that to the back of the edger. If this edger has the optional second pump, plug the pump into the back of the edger and connect this pump to the hose dangling from the bottom of the edger.
- 9) Plug the edger into the power source.
- 10) Power the edger up and allow the edger to initialize.
- 11) Install the cup holder and lens clamp.
- 12) Trace a frame and cut a lens to verify size and bevel position.

Should you need further assistance, contact our Help Desk at 1-800-644-3343



FIGURE 1



FIGURE 2

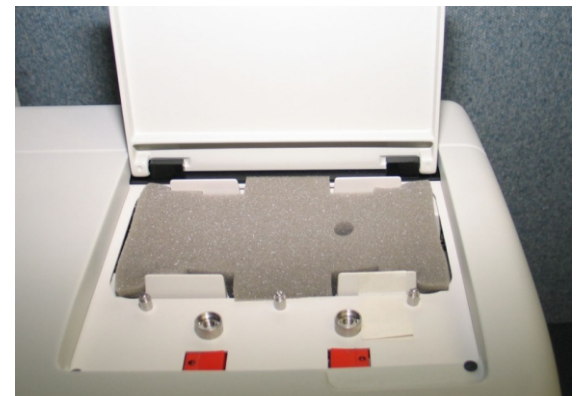


FIGURE 3

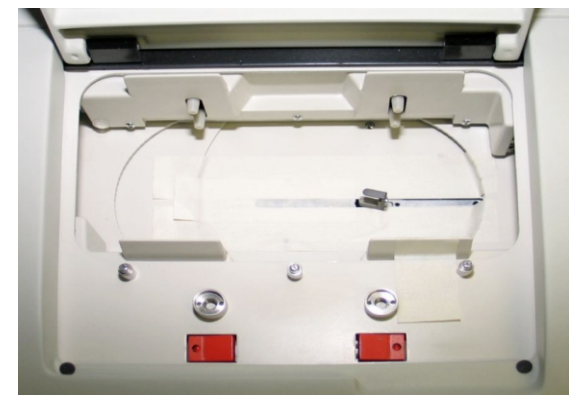


FIGURE 4